<Turbo>

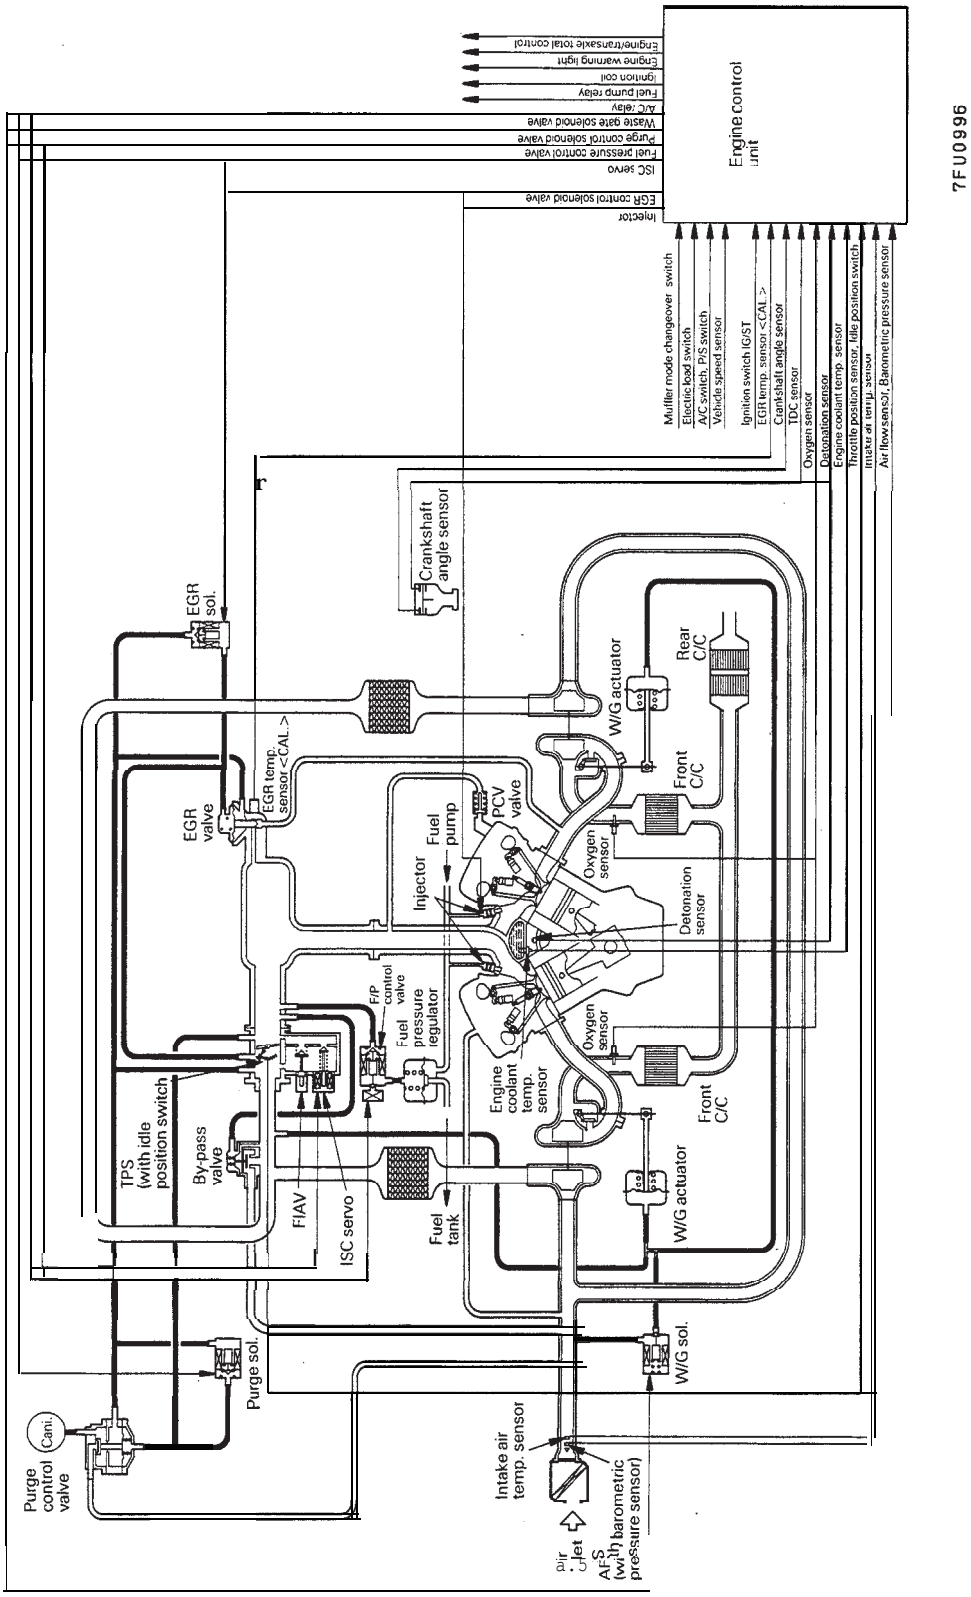
Engine control unit
Muffler mode changeover switch
Electric load switch
A/C switch, P/S switch
Vehicle speed sensor
Ignition switch IG/ST
EGR temp. sensor <CAL.>
Crankshaft angle sensor
TDC sensor
Oxygen sensor
Detonation sensor
Engine coolant temp. sensor
Throttle position sensor, Idle position switch
Intake air temp. sensor
Air flow sensor, Barometric pressure sensor
Injector
EGR control solenoid valve
ISC servo
Fuel pressure control valve
Purge control solenoid valve
Waste gate solenoid valve
A/C relay
Fuel pump relay
Ignition coil
Engine warning light
Engine/transaxle total control
7FU0996
Crankshaft angle sensor
EGR sol.
EGR valve
EGR temp. sensor <CAL.>
Injector
Fuel pump
PCV valve
W/G actuator
Rear C/C
Front C/C
Oxygen sensor
Detonation sensor
F/P control valve
Fuel pressure regulator
Engine coolant temp. sensor
TPS (with idle position switch
By-pass valve
FIAV
ISC servo
Fuel tank
Purge sol.
W/G sol.
Purge control valve
Can.
Intake air temp. sensor
Air jet
AFS (with barometric pressure sensor)